

PART II: ACQUIRING SENSORS



SENTINEL

wireless edition

→1: Nec4B1B95 A
2: Nec4B1B95 B

YOUR CLERAL SCALE SHOULD ALREADY BE SET WITH SENSORS AQUIRED PRIOR TO SHIPMENT. IT SHOULD NOT BE NECESSARY TO AQUIRE SENSORS UNLESS YOU WOULD LIKE TO USE YOUR SENTINEL UNIT WITH ADDITIONAL VEHICLES EQUIPPED WITH CLERAL SENTINEL WIRELESS SENSORS. ONLY ONE VEHICLE AT A TIME CAN BE AQUIRED AND USED WITH EACH SENTINEL HAND HELD UNIT. YOU CANNOT USE A SINGLE SENTINEL WIRELESS UNIT WITH MULTIPLE VEHICLES AT THE SAME TIME. YOU CANNOT USE MULTIPLE SENTINEL HAND HELD WIRELESS UNITS WITH A SINGLE VEHICLE AT THE SAME TIME.



SENTINEL

wireless edition

→1: Mec4B1B95 A
2: Mec4B1B95 B

START THE TRUCK OR TURN ON THE KEY TO MAKE SURE THAT YOU HAVE POWER TO THE SENSORS MOUNTED ON THE TRUCK. PRESS THE "ACQ" ACQUIRE KEY AND THE SENTINEL UNIT WILL AUTOMATICALLY SEARCH FOR AND ACQUIRE ANY SENSORS IN RANGE (0'-400'). ONCE LOCATED THE TYPE OF SENSOR MEC FOR MECHANICAL OR AIR ALONG WITH THE INDIVIDUAL ADDRESS AND CHANNEL "A", "B" ETC.



SENTINEL

wireless edition

→ 811234567890
2: Nec4B1B95 B

 CLERAL PS2

ONCE ACQUIRED SELECT AND
HIGHLIGHT THE INDIVIDUAL SENSORS
BY PRESSING THE RIGHT ARROW KEY.

CAL PRINT

TARE MENU **CYCLE**

ON/OFF DOWN LIGHT

SENTINEL

wireless edition

1812231345:
→2: Nec4B1B95 B


 CLERAL PS2

USE THE DOWN ARROW KEY TO SCROLL TO THE NEXT SENSOR.

DATA
CALIBRATION
TARE
MENU
ACQ
CYCLE
ON/OFF
DOWN
LIGHT

SENTINEL

wireless edition

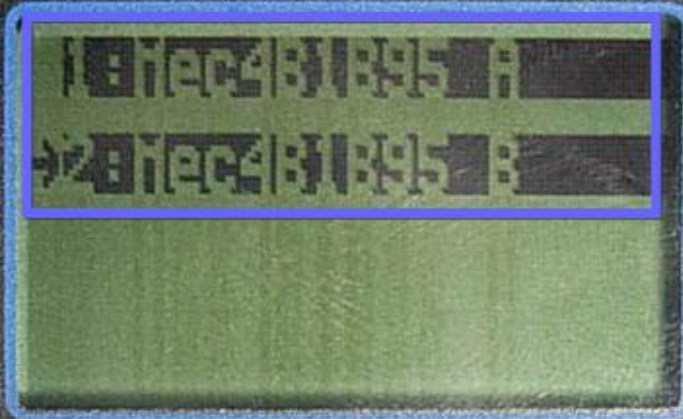

PRESS THE RIGHT ARROW KEY TO HIGHLIGHT AND SELECT ADDITIONAL SENSORS. ONCE ALL THE DESIRED SENSORS ARE SELECTED PRESS THE "ACQ" ACQUIRE KEY TO CONFIRM.



