


## PART III: TARE



# SENTINEL

wireless edition

GWT T: 24180 Lbs

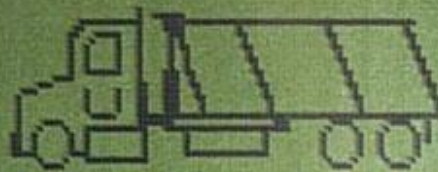

9110

15070

TARE IS USED TO ZERO THE SCALE. TARE  
RESETS THE SENSORS BACK TO THEIR  
ORIGINAL EMPTY WEIGHT CALIBRATION.  
TARE IS USED TO COMPENSATE FOR  
CHANGES IN CLIMATIC CONDITIONS SUCH AS  
AIR TEMP., EQUIPMENT TEMP., ALTITUDE, ETC.  
ONLY TARE OR ZERO YOUR SCALE WHEN  
EMPTY. IF TARE IS ACCIDENTALLY PERFORMED  
WHILE THE TRUCK IS FULL SIMPLY EMPTY THE  
TRUCK AND PERFORM TARE AGAIN



TO TARE PRESS TARE KEY  
WHEN PROMPTED "YES"  
PRESS TARE KEY AGAIN TO  
CONFIRM "YES" AND TARE IS  
COMPLETED IF "NO" PRESS  
DOWN ARROW KEY TO  
DISPLAY "NO" PRESS TARE  
KEY AGAIN TO CONFIRM "NO"



