

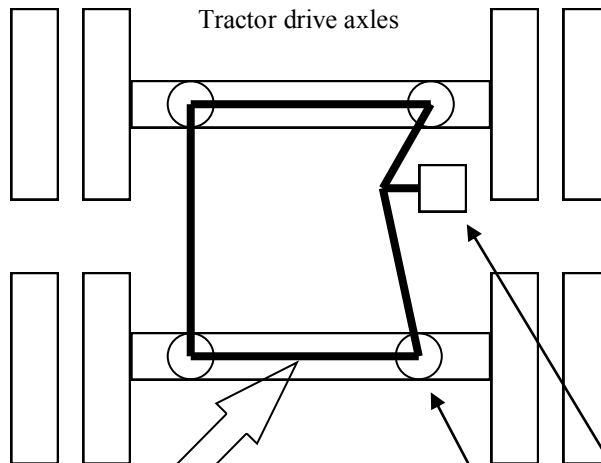


SENTINEL TRACTOR/TRAILER INSTALL SWE-TT-A1A1

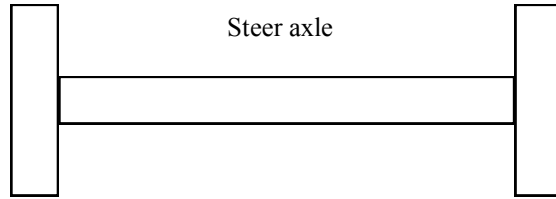

Properly functioning leveling valves are important to the function of the scale. It is recommended that "immediate response" leveling valves be used for optimal performance. Non immediate response valves could cause the scale to react slowly.

Sentinel wireless air sensors (2)

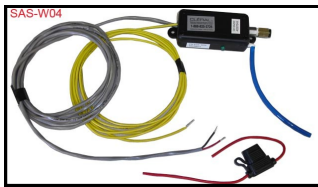

Connect sensors to 12v power source. Important: must be at least 12v. NO LESS. Power source less than 12v may cause sensor to not function properly.

